



10134

FIG. 238—REAR AXLE

- 1—Bearing Cup
- 2—Cone and Rollers
- 3—Shims
- 4—Differential Case
- 5—Gear and Pinion
- 6—Inner Bearing Cone and Rollers
- 7—Inner Bearing Cup
- 8—Shims
- 9—Fitting

- 10—Housing
- 11—Outer Bearing Cup
- 12—Outer Bearing Cone and Rollers
- 13—Oil Slinger
- 14—Gasket
- 15—Oil Seal
- 16—Dust Shield
- 17—End Yoke
- 18—Washer
- 19—Pinion Nut
- 20—Shims
- 21—Cup
- 22—Cone and Rollers
- 23—Oil Seal
- 24—Drain Plug
- 25—Thrust Washer
- 26—Differential Gears
- 27—Thrust Washer

- 19—Pinion Nut
- 20—Shims
- 21—Cup
- 22—Cone and Rollers
- 23—Oil Seal
- 24—Drain Plug
- 25—Thrust Washer
- 26—Differential Gears
- 27—Thrust Washer

- 28—Axle Shaft
- 29—Spacer
- 30—Gasket
- 31—Housing Cover
- 32—Screw and Lockwasher
- 33—Filler Plug
- 34—Lock Pin
- 35—Pinion Shaft
- 36—Lock Strap
- 37—Screw